 


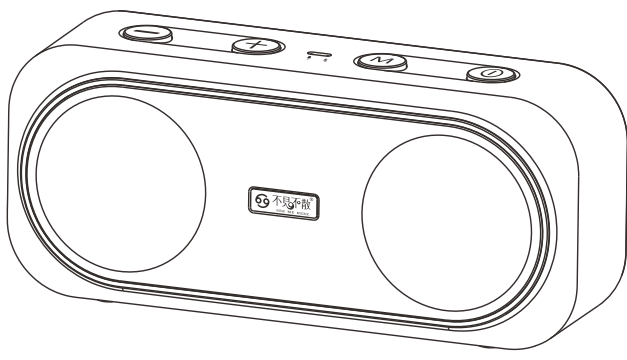

BV660 蓝牙音箱

Bluetooth Speaker

使用说明书

USER MANUAL



出品商:深圳市不见不散电子有限公司

地址: 深圳市宝安区航空路32号·不见不散视听创新园

电话: 0755-61181399 网址: www.hb2099.com

品牌售后服务

01 Warnings

 
English



- ◆To ensure proper use and trouble-free operation, please carefully read this user manual first.
- ◆For the first use, a full charge is recommended.
- ◆Please use and store the product at room temperature.
- ◆Do not throw and drop the product to avoid damages.
- ◆Do not expose the product to fire, high temperature, direct sunlight, etc.
- ◆Do not use organic solvents or other chemicals to clean the product.
- ◆Do not allow small particles to get into the product.
- ◆Please keep volumes of the speaker moderate to avoid temporary or permanent hearing impairment.
- ◆Do not disassemble the product, or make any modifications to the structure or any parts of it.
- ◆Keep the product out of children's reach.
- ◆If the battery is not properly replaced, there will be an explosion accident, which can only be replaced with the same type of battery.
- ◆Batteries (battery packs) can not be exposed to such conditions as sunshine, fire or similar overheating conditions

02 Packing details


English

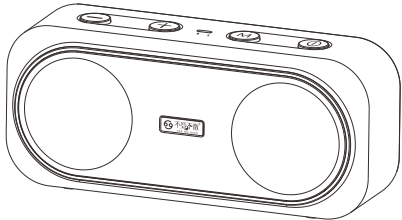


Bv660 Speaker 1pc



 User manual




Micro USB Charging & data cable 1pc

 

3.5MM Audio cable 1pc

03 Keys functions

 English

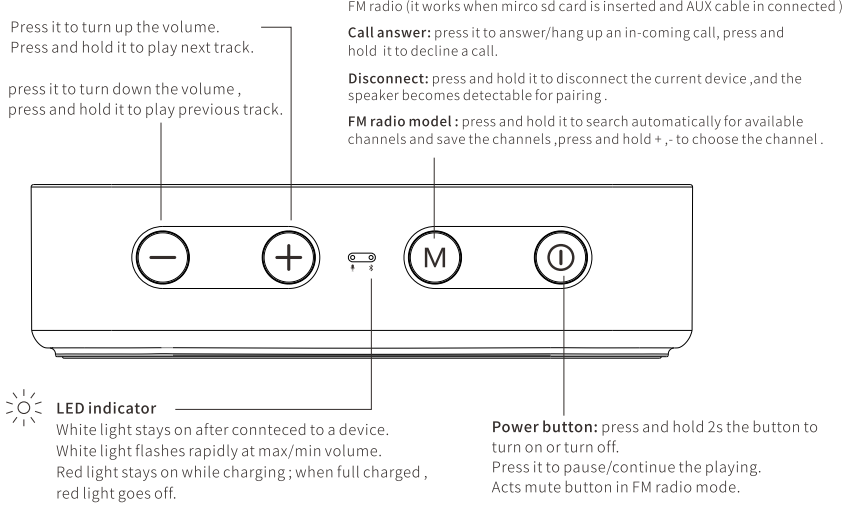


Mode Button : press it to switch modes in turns as followed:
Bluetooth mode →Mirco SD card mode →USB flash device →Aux-in mode→
FM radio (It works when mirco sd card is inserted and AUX cable in connected)
Call answer: press it to answer/hang up an in-coming call, press and hold it to decline a call.
Disconnect: press and hold it to disconnect the current device, and the speaker becomes detectable for pairing.
FM radio model: press and hold it to search automatically for available channels and save the channels ,press and hold + , - to choose the channel .

LED indicator
White light stays on after conncted to a device.
White light flashes rapidly at max/min volume.
Red light stays on while charging; when full charged , red light goes off.

Power button: press and hold 2s the button to turn on or turn off.
Press it to pause/continue the playing.
Acts mute button in FM radio mode.

04 Ports functions

 English

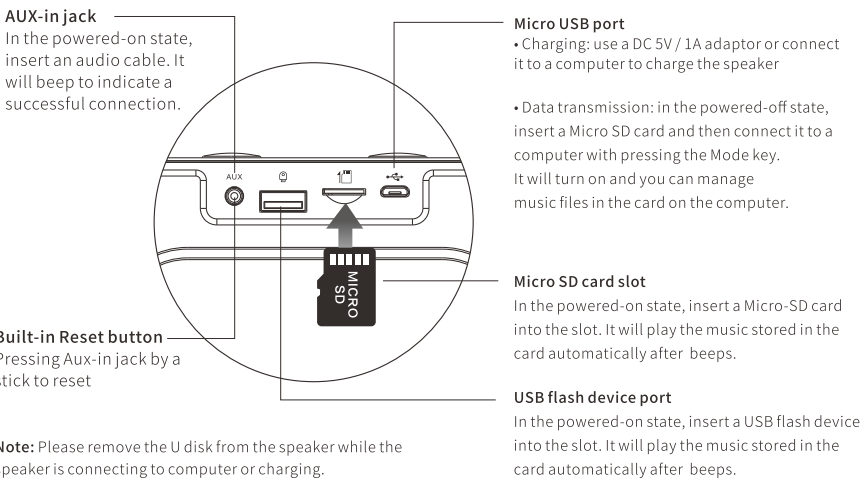

AUX-in jack
In the powered-on state, insert an audio cable. It will beep to indicate a successful connection.

Micro USB port
• Charging: use a DC 5V / 1A adaptor or connect it to a computer to charge the speaker
• Data transmission: in the powered-off state, insert a Micro SD card and then connect it to a computer with pressing the Mode key. It will turn on and you can manage music files in the card on the computer.

Micro SD card slot
In the powered-on state, insert a Micro-SD card into the slot. It will play the music stored in the card automatically after beeps.

USB flash device port
In the powered-on state, insert a USB flash device into the slot. It will play the music stored in the card automatically after beeps.

 
Note: Please remove the U disk from the speaker while the speaker is connecting to computer or charging.

05 Bluetooth connection

English

Turn on speaker
Press and hold power button for 2 seconds, it issues a sound of "Ding", and the white LED light flashes ,it can be detected.

Pair a Bluetooth device
Active the Bluetooth of your device, and search for BV660, Once the connection is completed, the speaker will beep and the white LED light will stay on.

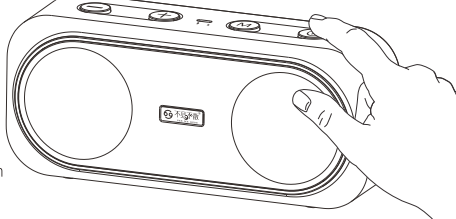


The speaker will re-connect to the used device nearby automatically if the Bluetooth is activated in the future.

Others instructions


If you want to pair the speaker with another device ,press and hold the Mode button to disconnect the current device and the speaker becomes detectable.

06 True Wireless Stereo (TWS)Function

 English

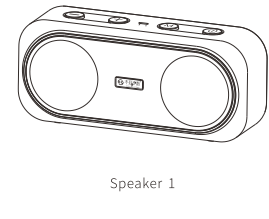

Speaker 1

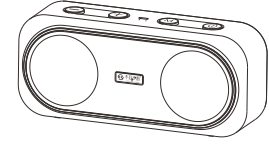 

Speaker 2

1, Set up the TWS system
Turn on two BV660 speakers and make sure neither of them is paired with any mobile device. Doule press one speaker' s Mode Button .It issues a sound and the speaker begins to connect with the other one.After a sound of Ding-dong,the TWS system is set up successfully.

2,Connect them to a Bluetooth device
Activate the Bluetooth of your device of your device and search for BV660 , select it once it' s on the list .It beeps and white LED light keep on indicating a successful connection between the device and the speakers.

3,Disable the system
Press and hold either speaker' s Mode button to disconnect the device and disable the TWS system.


Other instructions:

- 1.The Main speaker is the left channel and the corresponding speaker is the right channel.
- 2.The TWS system support two speakers only.
- 3.Under the TWS system ,you can play music via Bluetooth or an Aux-in cable.The TWS system does not support in Mirco SD card mode.
- 4.Under the TWS system ,you just need to operate either speaker ,the other one will do the same operation simultaneously.

07 Specifications

English

Basic parameters	
Speaker type	Bluetooth speaker
Support storage	Up to 32GB Micro SD card(FAT 32)
Power supply	Built-in 2000mAh lithium battery DC 5V--1A USB charger adapter about 2.5 hours
Technical Parameters	
Loudspeaker	Φ57mm*2 external magnetic speakers + low frequency radiator
Output power	10W THD≤1%
Frequency response	70Hz-18KHz
Bluetooth standard	Bluetooth 5.0
USB Standard	USB2.0 (complatible with USB1.1)
Playing parameters	
Media Type	MP3,WAV
Support Media Type	MP3:8Kbps-320Kbps WAV:32Kbps-384Kbps

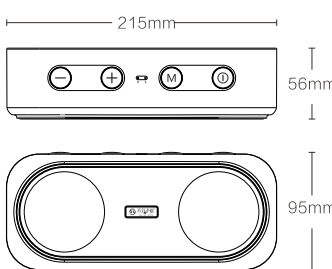 

Product size:215×56×95mm
Product net weight:740g(include Built-in lithium battery)

08 FAQ

English

FAQ	Solutions
Not able to connect your device	1.Restart the speaker and try again 2.If your device requires Pin code ,please enter 0000.
Keeps cutting out when playing	Please ensure the speaker is within he operating range and there is nothing in between the speaker and the device.
Not able to play the music in Mirco SD card	1.Please ensure the forams of the Micro SD card is FAT32 . 2.Please ensure the formats of the music files are MP3、WAV
No sound when playing	1.Please ajust the volume of the speaker . 2.Please check if the speaker is paused.
No able to turn on	Please try to charge the speaker for about 2 hours .
No response to any operation	Please try to power-off the speaker by pressing the reset button in the Aux-in jack.

09 注意事项

 
简体中文



- ◆请阅读本说明。
- ◆请遵循本说明。
- ◆请在常温环境中存放和使用本产品。
- ◆请勿在近热源处使用本产品,如散热器、热风调节器、炉灶或其他产生热量的仪器(包括放大器)。
- ◆请勿堵塞音箱的开口处,勿将物体塞入音箱的通风口或槽隙中。
- ◆请勿丢弃,避免因跌落造成本产品损坏。
- ◆请使用音箱额定电压的电源充电器充电。
- ◆如果连接线与您的设备不匹配,请与销售商联系。
- ◆请将音箱调至合适音量,避免对您的听力造成损害。
- ◆无论设备因何原因损坏,都必须及时请专业维修人员修理,擅自拆卸将使保修失效。
- ◆如果电池更换不当会有爆炸危险,只能用同样类型或等效类型的电池来更换。
- ◆电池(电池包或者组合电池)不得暴露在诸如日照、火烤或类似过热环境中的警告。

10 包装清单


简体中文

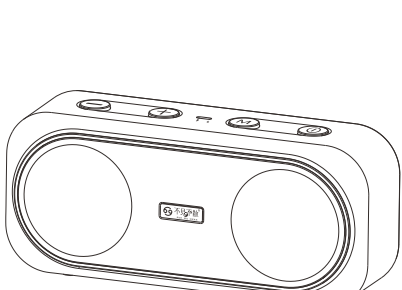


音箱主机 1台



 使用指南 1份




USB电源线/数据线 1条

 

3.5mm音频线 1条

11 按键功能指示

 简体中文

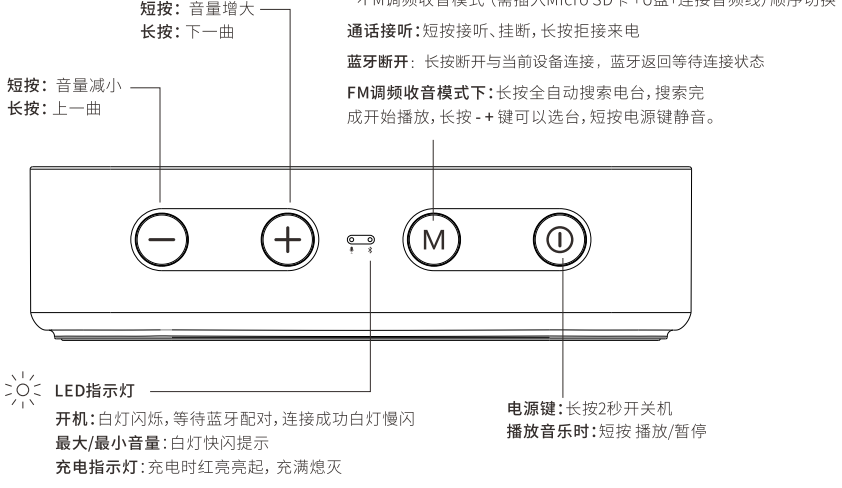

短按: 音量增大
长按: 下一曲

短按: 音量减小
长按: 上一曲

 
M模式键:短按模式切换
蓝牙模式 →Micro SD卡音乐模式 →U盘模式 →AUX外接音源模式 →FM调频收音模式 (需插入Micro SD卡 +U盘+连接音频线) 顺序切换
通话接听:短按接听、挂断,长按拒接来电
蓝牙断开: 长按断开与当前设备连接, 蓝牙返回等待连接状态
FM调频收音模式下: 长按全自动搜索电台,搜索完成开始播放,长按 + 键可以选台,短按电源静音。

LED指示灯
开机:白灯闪烁,等待蓝牙配对,连接成功白灯慢闪
最大/最小音量:白灯快闪提示
充电指示灯:充电时灯亮亮起,充满熄灭

电源键:长按2秒开关机
播放音乐时:短按播放/暂停

12 接口功能指示

简体中文

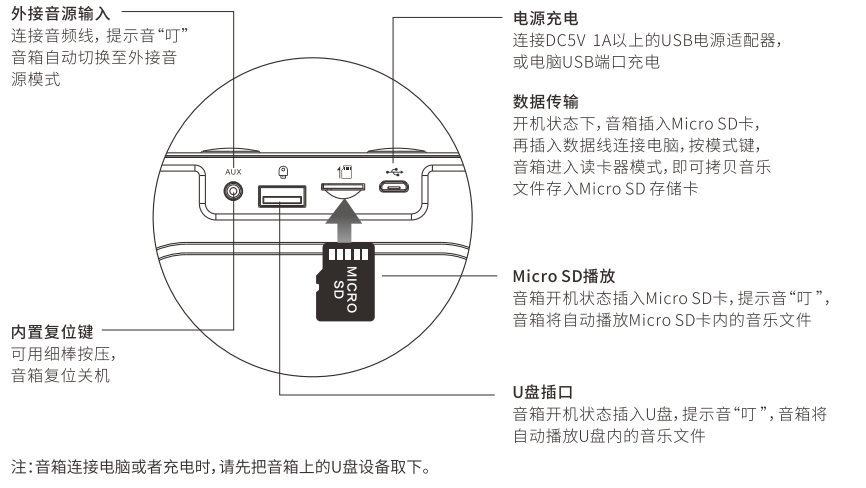

外接音源输入
连接音频线,提示音“叮”
音箱自动切换至外接音源模式

电源充电
连接DC5V 1A以上的USB电源适配器,或电脑USB端口充电

数据传输
开机状态下,音箱插入Micro SD卡,再插入数据线连接电脑,按模式键,音箱进入读卡器模式,即可拷贝音乐文件存入Micro SD存储卡

Micro SD播放
音箱开机状态插入Micro SD卡,提示音“叮”,音箱将自动播放Micro SD卡内的音乐文件

内置复位键
可用细棒按压,音箱复位关机

U盘接口
音箱开机状态插入U盘,提示音“叮”,音箱将自动播放U盘内的音乐文件

 
注:音箱连接电脑或者充电时,请先把音箱上的U盘设备取下。

13 蓝牙音频连接

简体中文

1、音箱开机
长按电源键2秒开机,“叮”声后,接着白灯闪烁,等待蓝牙配对。

2、连接到移动设备
开启移动设备蓝牙选项,在蓝牙设备列表中中找到BV660,连接成功您将听到提示音,同时LED指示白灯慢闪。

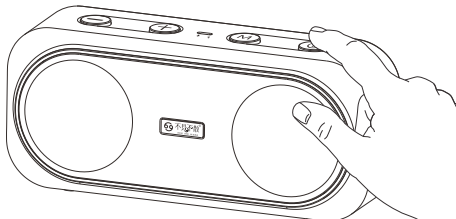


后续使用中,只要保持移动设备的蓝牙开启,即可自动连接。


其它说明:
如果连接其它蓝牙设备,长按模式键断开与当前设备连接,蓝牙返回等待连接状态。

14 TWS无线串联功能

 简体中文

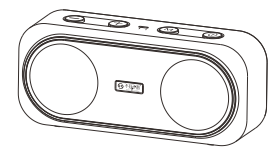

主音箱

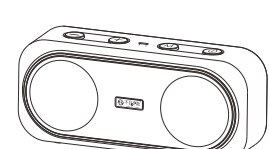 

从音箱

1、TWS连接操作
两台开机且未连接蓝牙的音箱,选择任意一台,短按2次**模式键**,提示“咚”正在TWS配对,听到“咚咚”声后,两个音箱无线串联成功。

2、将串联音箱连接到移动设备播放
开启移动设备蓝牙选项,在蓝牙设备列表中找到 BV660,连接成功您将听到提示音,同时LED指示白灯慢闪。

3、TWS断开操作
已串联成功的两个音箱,长按其中一个音箱的**模式键**,可断开TWS连接。


其它说明:

- 01、首次两台音箱进行TWS串联,短按2次模式键进入TWS串联的音箱为主音箱左声道,另一台为从音箱右声道。
- 02、TWS无线串联,仅支持2个音箱设备无线串联
- 03、TWS串联后的两台音箱,会记忆之前的主从关系,两台音箱下次开机后会自动TWS串联。
- 04、TWS串联前,从音箱LED指示灯常亮,由主音箱指示灯显示播放、暂停、和手机蓝牙连接等状态。
- 05、无线串联成功后,操作任一音箱功能按键,另一音箱同步相应操作

15 技术参数

简体中文

基本参数	
音箱类型	蓝牙音箱
存储类型	支持容量不大于32G Micro SD卡/U盘
电源供应	内置2000mAh锂电池 DC5V-1A的USB电源充电约2.5小时左右
音频播放时间	中等音量6小时以上
技术参数	
扬声器单元	Φ57mm x2 外磁喇叭+低频辐射器
输出功率	10W THD≤1%
频率响应	70Hz~18KHz
无线连接	Bluetooth 5.0
USB规格	USB2.0,兼容USB1.1
播放功能	
文件格式	MP3、WAV
文件格式	MP3:8Kbps-320Kbps WAV:32Kbps-384Kbps

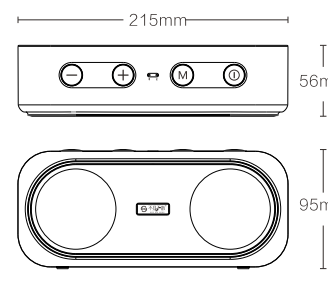 

17 产品售后服务条例

简体中文

一、 本公司提供的售后服务方式:

- 1.咨询服务: 用户在使用产品前, 请仔细阅读本产品的使用说明书, 在使用过程当中遇到任何问题, 均可与当地经销商联系, 或致电不见不散全国统一客服热线: 400-888-0396, 或登陆不见不散官方网站 www.hb2099.com查询。
- 2.包换服务: 包换期内(自购机之日起七日内), 正常使用出现了非人为故障, 请保持产品、配件和包装的外观与完整 (若外观损坏, 作保修处理), 经检测确认故障后, 可选择换货或修理, 用户可则当地不见不散委托经销商处联系处理。
- 3.保修服务: 保修期内, 正常使用出现了非人为故障, 均可享受免费保修服务 (主机一年內免费保修, 若人为损坏, 作收费维修处理)。
- 4.收费维修服务: 产品在购机之日起一年到三年内, 出现故障可收费维修, 用户需要支付维修所需的元件费、运输费和合理的维修人工费。
- 5.以下情况不在三包范围内, 本公司可提供有偿服务:
 - (1) 超过三包期限。
 - (2) 涂改三包凭证, 或序列号与产品本身不符。
 - (3) 意外因素或人为行为导致的产品损坏 (如: 未按使用说明书操作、维护或保管, 错误安装造成的故障, 接入不合适的电源, 进水、渗油、摔坏等)。
 - (4) 无有效三包凭证和有效发票 (能证明产品确属服务期内者除外)。
 - (5) 因不可抗力如地震、火灾、水灾、雷击等导致的产品故障或损坏。
 - (6) 未经本公司许可, 擅自拆卸、修理或改装。

二、 关于售后服务的说明:

1. 购机日期以本凭证或购机发票为准, 不能提供有效证明的, 以生产日期为准。
2. 质量问题不包括用户对个人对音质、音色等主观评价。
3. 外壳、说明书、包装不在保修服务范围内。
4. 对已停产型号产品的服务, 本公司仅做功能性维修 (外观可能与原产品有异)。
5. 经销商向您做出的非本公司保证的其它承诺, 本公司不承担任何责任。
6. 用户在接受服务之前请将重要资料另行备份或记录, 因维修或其他任何原因造成的任何损失, 本公司概不负责。因保管不善等原因将机内资料泄露给第三者所造成的损失(如: 银行帐号、密码、资料被更改等), 本公司也概不负责。
7. 在免费保修期内, 本公司或授权服务机构拥有更换后的故障件的所有权及处置权。
8. 使用本产品前, 请仔细阅读本产品的使用说明书, 并妥善保管购机凭证。本三包凭证内容解释权归属深圳市不见不散电子有限公司所有, 如有变动, 恕不另行通知。

客户服务时间: 每周一至周六 8: 30--18: 00
(法定节假日除外) 公司网址: www.hb2099.com