



出品商: 深圳市不见不散电子有限公司
地址: 深圳市宝安区航空路32号-不见不散视听创新中心
电话: 0755-61181399 网址: www.hb2099.com

品牌自主服务

不见不散
SEE ME HERE



BV680 K歌声卡蓝牙音箱
KTV BLUETOOTH SPEAKER
WITH SOUND CARD

使用说明书
USER MANUAL

Table of Contents

- 01 - 09 English
- 10 - 18 简体中文
- 19 产品售后服务条例
- 产品保修卡

01 Warnings


English



- Please carefully read this user manual first.
- For the first use, a full follow is recommended.
- Please use and store the product at room temperature/normal atmospheric temperature.
- Do not throw and drop the product to avoid damages.
- Do not use this product near a heat source, such as radiators, heat regulators, stoves or other heat generating devices (including amplifiers).
- Do not plug the opening of the speaker, do not plug the object into the speaker vent or slot
- Do not throw it to avoid the damage caused by falling.
- Please use charger with the rated voltage of the speaker charger.
- If the connector does not match your device, please contact the vendor.
- Please turn the speaker to the proper volume to avoid damage to your hearing.
- Regardless of any cause of the equipment damage, it must be repaired promptly by professional maintenance personnel, unauthorized dismantling will invalidate the warranty.
- If the battery is improperly replaced, there is a risk of explosion. Only the same or equivalent type of battery can be replaced.
- Warning that batteries (battery packs or battery packs) should not be exposed to conditions such as sunlight, fire, or similar overheating.


02 Packing details

English

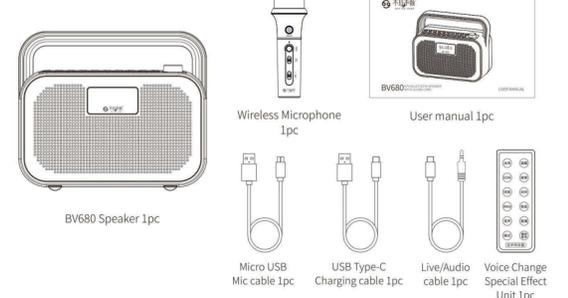


03 Buttons'function

English

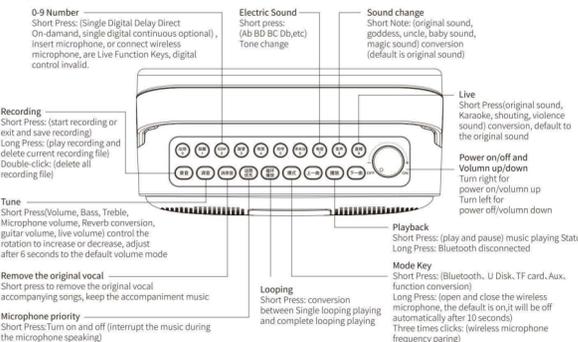


04 Ports'function indicator

English

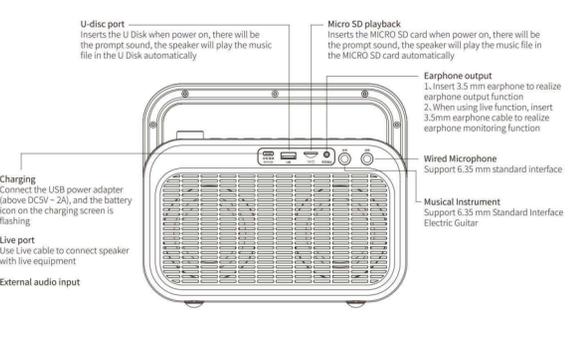


05 Bluetooth connection

English

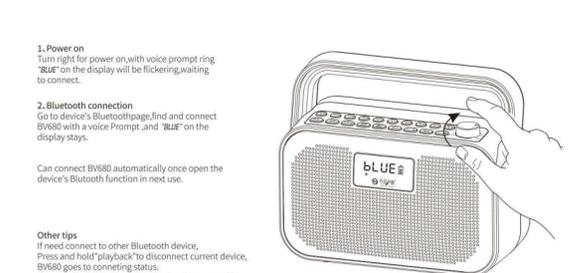


06 Microphone function and connection

English

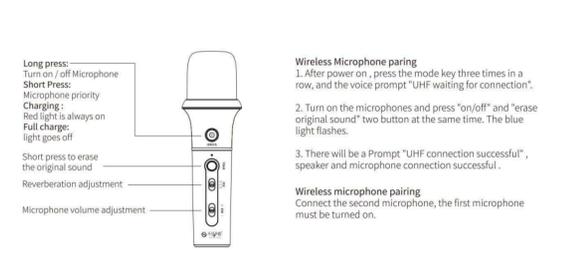

07 Live connection

English

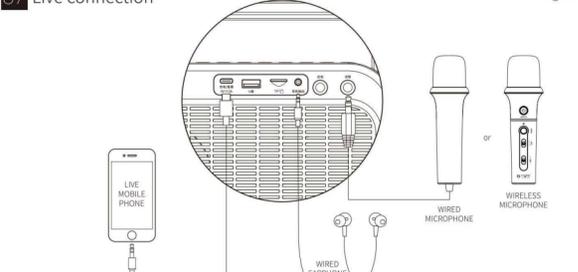

08 Technical Specification

English

Basic	
Speaker type	Bluetooth speaker
Support storage	Up to 32GB Micro SD card / U disk
Power supply	Built in 7.4V/3600mAh lithium battery DC 5V=2A USB charger adapter for 3.5 hours
Technical	
Trumpet	2 X 1.3 inch Horn(20 cores) 2 X 31MM Tremble 2 X 90MM X-bass radiator
Frequency response	70Hz-18KHz
Bluetooth standard	Bluetooth 5.0
Volume control method	Knob
Low frequency high frequency adjustment	Key selection and knob adjustment
USB Standard	USB2.0 Compatibility USB1.1
Misc File	MP3, WMA, WAV, APE, FLAC

Product Size: 235x198x112mm
Product weight: 1745g±10g (including built-in Lithium battery)

09 FAQ

English

FAQ	Solutions
Can not pair connect your device	1. Restart the speaker 2. If Pin code, enter 0000.
Discontinuity	1. Check if it is beyond the effective distance 2. No barrier between the device and speaker
Can not play the music in Micro SD card or format incorrect	1. Check and ensure the formats of the Micro SD card is FAT32 2. Ensure the formats of the music files are APE, FLAC, MP3, WMA, WAV
No sound when playing	1. Adjust the volume of the speaker. 2. Check if the speaker is paused or mute
AUX mode no sound	1. Check that AUX cable is plugged in properly 2. Check the AUX cable plug being damaged
Can not play the music in USB disk	1. Check if it is in USB mode 2. Check if the USB disk flash is being damaged, can not play the USB disk 3. While connecting computer to use data transfer, cannot play the USB disk
Microphone No sound	1. Check if the Wireless microphone are connected well 2. Check if the microphone is turned down to a minimum level 3. Check the microphone Jack position, make sure it matches the correct mark
Two different voice during Live	Shut down the voice of the live


10 注意事项

简体中文

- 请阅读本说明。
- 请遵循本说明。
- 请在常温环境中存放和使用本产品。
- 请勿在高温热源处使用本产品,如散热器、热风调节器、炉灶或其他产生热量的仪器(包括放大器)。
- 请勿堵塞音箱的开口处,勿将物体塞入音箱的进气口或槽中。
- 请勿丢弃,避免因跌落造成本产品损坏。
- 请勿使用音箱额定电压的电源为音箱充电。
- 如果连接线与您设备不匹配,请与销售商联系。
- 请保持音箱音量适中,避免对听力造成损害。
- 无论设备因何原因损坏,都必须及时请专业维修人员修理,擅自拆卸将使保修失效。
- 如果电池更换不当会有爆炸危险,只能用同样类型或等效类型的电池来更换。
- 电池(电池包或者组合电池)不得暴露在诸如日照、火烤或类似过热环境中的警告。
- 消费者若使用电源适配器充电,则应购买配套使用获得CCC认证并满足标准要求的电源适配器。


11 包装清单

简体中文

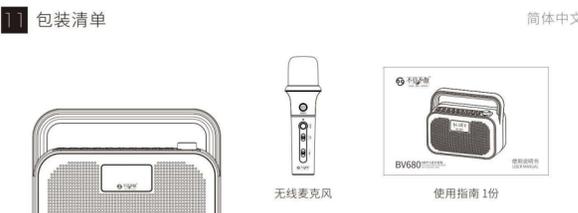

12 按键功能指示

简体中文

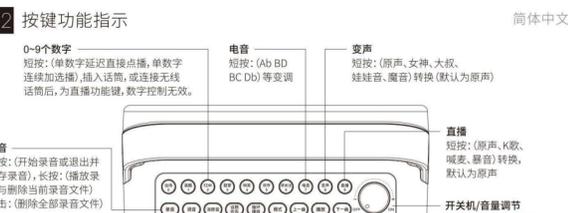

13 接口功能指示

简体中文



14 蓝牙音频连接

简体中文




15 麦克风功能与连接

简体中文



16 直播连接

简体中文

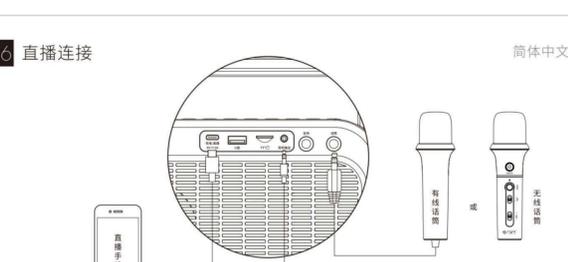

17 技术参数

简体中文

基本参数	
音箱类型	蓝牙音箱
存储类型	支持容量不大于32G Micro SD卡/U盘
电源供应	内置7.4V/3600mAh锂电池 标准DC5V=2A电源充电约3.5小时
技术参数	
扬声器单元	3寸低音喇叭*2 11mm磁路高音*2
频率响应	70Hz-18KHz
无线连接	Bluetooth 5.0
音量调节方式	旋钮调节
低噪高频调节	按键选点, 旋钮配合调节
USB规格	USB2.0, 兼容USB1.1
支持文件格式	MP3, WMA, WAV, APE, FLAC

产品规格: 235x198x112mm (含内置锂电池)
产品重量: 1745g±10g (含内置锂电池)

18 疑难解答

简体中文

故障	解决方法
多次连接配对不成功	1. 关闭音箱重新开机 2. 如果你的设备需要通行码, 请输入0000
音乐播放出现断音	1. 连接设备是否超出有效连接距离, 或音箱与设备之间障碍物
Micro SD卡出错格式错误	1. 检查Micro SD卡格式是否正确(音箱支持Micro SD卡格式为FAT32) 2. Micro SD卡内文件是否为MP3, WMA, WAV, APE, FLAC
播放时无声	1. 检查音箱音量是否没有调节 2. 检查音箱音量是否处于静音或暂停状态 3. 检查音箱插线是否正确
AUX模式无声	1. 检查音箱插线是否正确 2. 检查音箱插线头是否插紧
U盘无法播放	1. 检查是否插入U盘模式 2. 检查U盘是否损坏 3. 正在连接电脑使用数据传输, 是不能U盘播放的
话筒无声	1. 检查无线麦克风是否已经连接 2. 检查麦克风音量是否被关太小 3. 检查话筒的插入位置, 确保对上标识
直播音有两个声音	关闭直播软件中的耳返

19 产品售后服务条例

简体中文

- 本公司提供的售后服务方式:
1. 咨询服务: 用户在使用产品前, 请仔细阅读本产品的使用说明书。在使用过程中遇到任何问题, 均可与当地经销商联系, 或致电不见不散全国统一客服热线: 400-888-0396, 或登陆不见不散官方网站 www.hb2099.com 查询。
2. 包换服务: 包换期内(自购机之日起七日内), 正常使用出现了非人为故障, 请保持产品、配件和包装的外观与完整 (若外观损坏, 作保修处理), 经检测确认后, 可选择换货或修理, 用户可到当地不见不散委托经销商处联系处理。
3. 保修服务: 保修期内, 正常使用出现了非人为故障, 均可享受免费保修服务 (主机一年内免费保修, 若人为损坏, 作收费维修处理)。
4. 收费维修服务: 产品在购机之日起一年到三年内, 出现故障可收费维修, 用户需要支付维修所需的元件费、运输费和合理的维修人工费。
- 以下情况不在三包范围内, 本公司可提供有偿服务:
(1) 超过三包期限。
(2) 涂改三包凭证, 或序列号与产品本身不符。
(3) 意外、人为或行为导致的产品损坏 (如: 未按使用说明书操作、维护或保管, 错误安装造成的故障, 接入不合适的电源, 进水、受潮、摔坏等)。
(4) 无有效三包凭证和有效发票 (能证明产品确属服务期者除外)。
(5) 因不可抗力如地震、火灾、水灾、雷击等导致的产品故障或损坏。
(6) 未经本公司许可, 擅自拆卸、修理或改装。

- 关于售后服务的说明:
1. 购机日期以本凭证中购机发票为准, 不能提供有效证明的, 以生产日期为准。
2. 质量问题不包括用户个人对音质、音色等主观评价。
3. 外观、说明书、包装不在保修服务范围内。
4. 对已停产型号产品的服务, 本公司仅做功能性修复 (外观可与新产品有差异)。
5. 经销商向用户做出的非本公司的其它承诺, 本公司不承担任何责任。
6. 用户在接受服务之前请将要资料备份或记录, 因维修或其他任何原因造成的任何损失, 本公司概不负责。因保管不善等原因将机内资料泄露给第三者所造成的损失(如: 银行卡号、密码、资料被更改等), 本公司也不负责。
7. 在免费保修期内, 本公司或授权服务机构拥有更换后故障件的所有权及处置权。
8. 使用本产品前, 请仔细阅读本产品的使用说明书, 并妥善保管购机凭证。本凭证内容解释权归属深圳市不见不散电子有限公司所有, 如有变动, 恕不另行通知。
- 客户服务时间: 每周一至周六 8:30-18:00
(法定节假日除外) 公司网站: www.hb2099.com